

Changing the opening code

Open the safe and press the red button on the inner side of the door (hinge side). A high-pitched signal then sounds, and the yellow LED on the keypad lights. Now enter the new 3 to 8 digit code (we recommend at least 4 digits). Confirm the code by pressing the key "#". A high-pitched acoustic signal shows that the new code is activated. The yellow LED goes out.



5.1 Unlocking

On entering the opening code each key press is confirmed by a high-pitched acoustic signal. Confirm the code by pressing the key "#". It will be confirmed by a high-pitched acoustic signal, and the green LED on the keypad lights.



5.2 Locking the safe

To lock the safe, shut the door and turn the bar handle 90° anti-clockwise. Ensure that the bolts do not contact the frame as this may cause the locking mechanism to malfunction.



ueberfluss.de